 
 


Overview of Pi-Star Auto AP boot-up steps for a new wireless network:

 
- 1** Power on Pi-Star hotspot to start boot up. Computer Wi-Fi is connected to wireless network. Auto AP requires RPi 3 or RPi 0W.

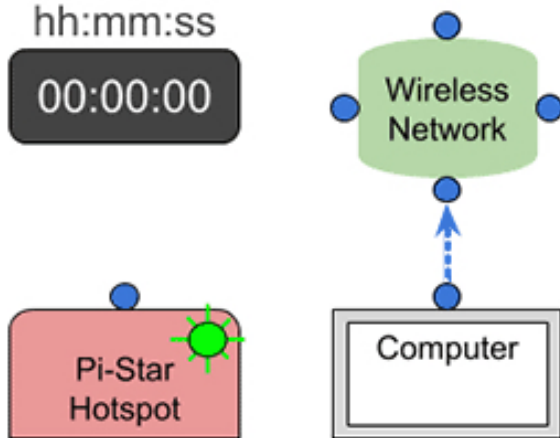


- 2** After boot-up, Pi-Star begins looking for known wireless networks.

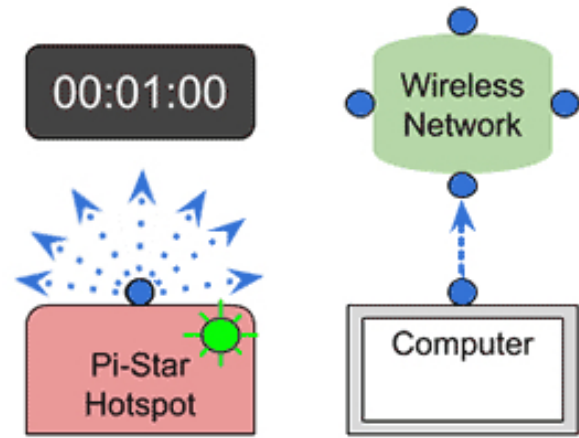


- 3** If no known wireless network found within 2 minutes, Pi-Star Auto AP creates its own access point named "Pi-Star-Setup." Auto AP password = raspberry

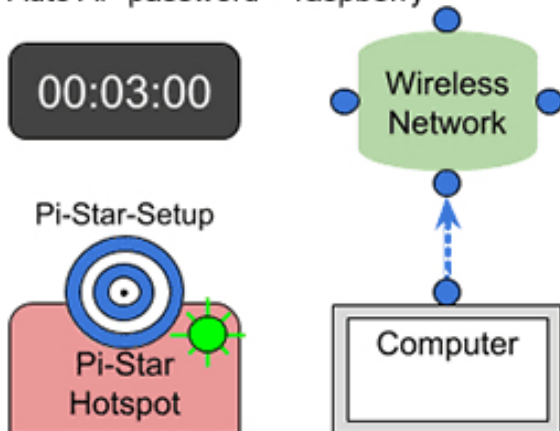

 - 4** Connect computer Wi-Fi to Pi-Star-Setup AP. In computer browser, navigate to Pi-Star > Configuration > Wireless Configuration, and then add wireless network.

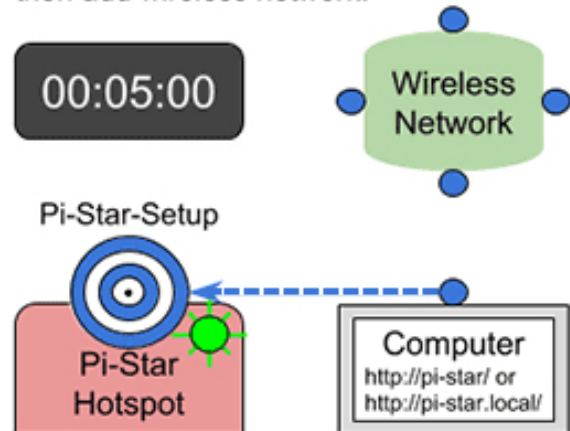

 - 5** Reboot Pi-Star hotspot. While rebooting, re-connect computer Wi-Fi to wireless network.

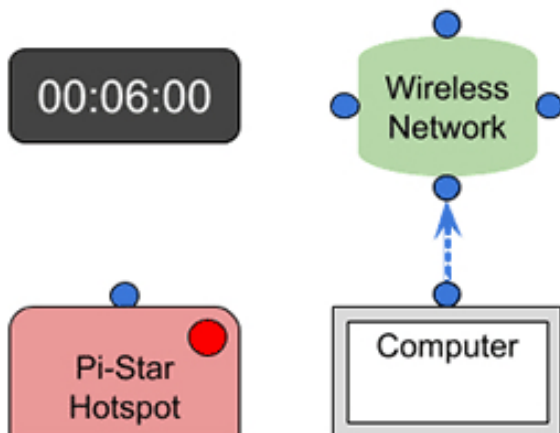

- 6** After Pi-Star hotspot reboots, it will connect to now known wireless network. In computer browser, navigate to Pi-Star.

